

GTS300 Speedo		GTS250 wiring	New Conn
Connector A	1. Fuel Level 1 Wht/Grn	13. Fuel Level 1 Wht/Grn	1
Connector A	2. Headlight Grn	5. Headlight Grn	1
Connector A	3. Turn Signal R Pink	18. Turn signal R Pink	1
Connector A	4. Turn Signal L Wht/Blu	19. Turn signal L Wht/Blu	1
Connector A	5. Sw. +12V Wht	10. Sw +12V Wht	2
Connector A	6. Oil Pressure Pink/Wht	12. Oil Pressure Pink/Wht	2
Connector B	1. GND Blk	8. GND Blk	3
Connector B	2. Warning LED Mrn/Blk	16. Warning LED Red/Grn	3
Connector B	3. Fuel Level 2 Gra/Blk	14. Fuel Level 2 Gra/Blk	3
Connector B	4. Engine Temp 2 Grn/Yel	1. Engine temp 2 Grn/Yel	3
Connector C pigtail	1. Immobilizer LED Red/Grn	15. LED Immobilizer Wht/Yel	4
Connector C pigtail	2. +12V unsw Red/Blu	9. +12V unsw. Red/Blu	4
Connector C pigtail	3. Back light Yel/Blk	4. Backlight Yel/Blk	4
Connector C pigtail	4. Turn Signal Switch White	20. Turn signal switch Blu/Blk	4
		2. Air temp 1 Yel/Blu	2
		17. Air temp 2 Wht/Yel	2
		6. RPM - dash Yel	NC

Comment

wire color diff

wire color diff

GTS300 turn signal flasher, wire color diff

GTS300 missing

GTS300 missing

GTS300 missing