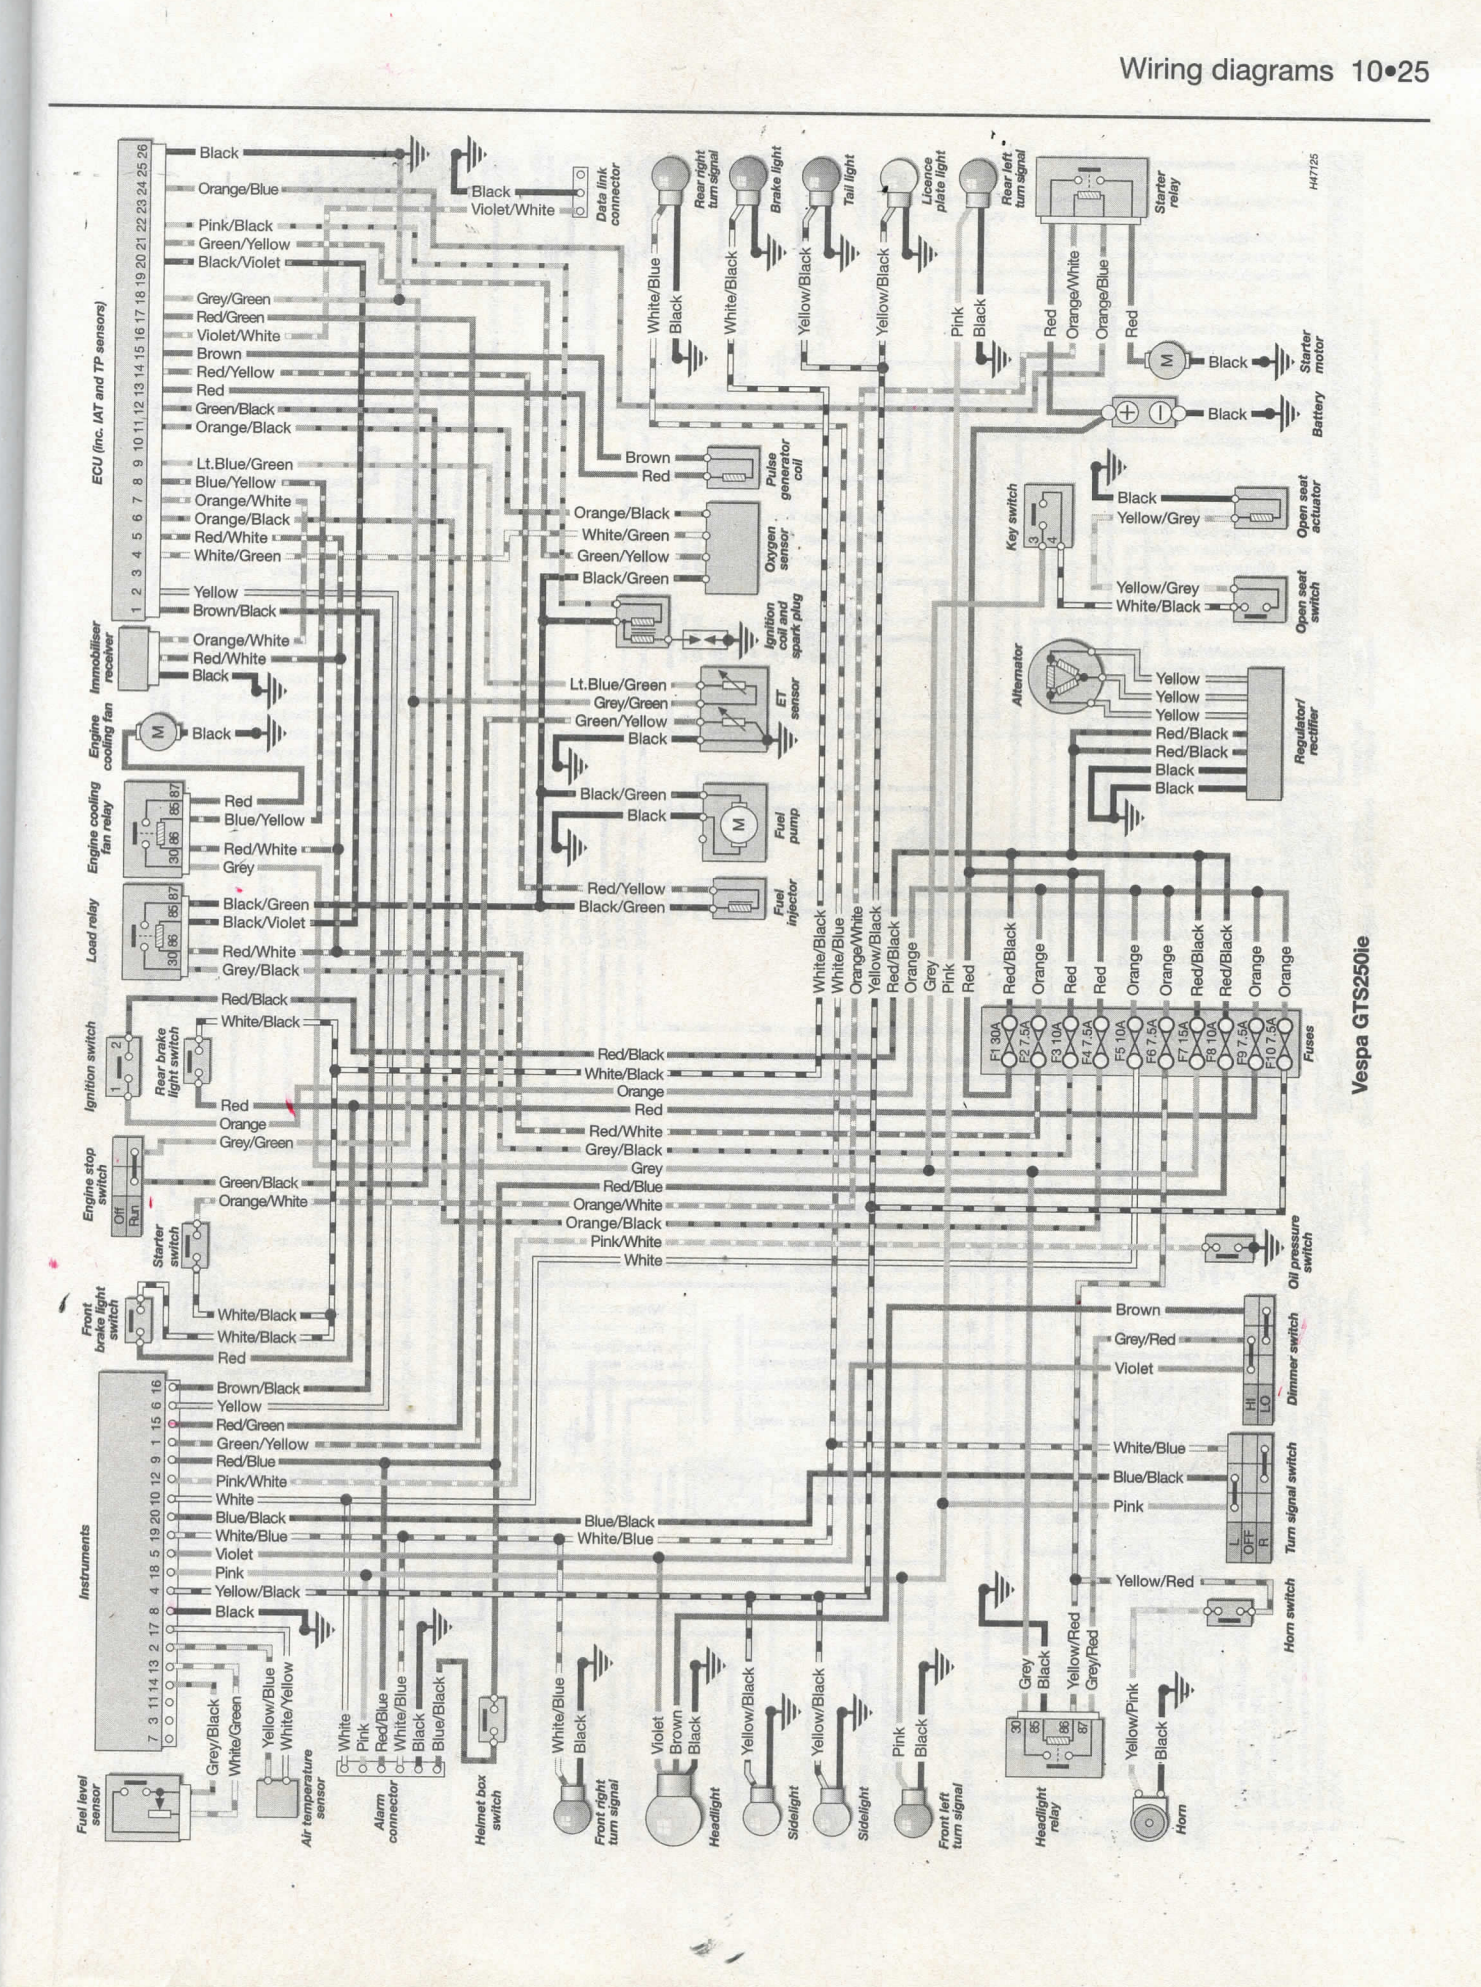
Vespa GTS250ie
H47125
ECU (inc. IAT and TP sensors)
Data link connector
Rear right turn signal
Brake light
Tail light
Licence plate light
Rear left turn signal
Starter relay
Starter motor
Battery
Pulse generator coil
Oxygen sensor
Ignition coil and spark plug
ET sensor
Fuel pump
Fuel injector
Key switch
Open seat actuator
Open seat switch
Alternator
Regulator/ rectifier
Immobiliser receiver
Engine cooling fan
Engine cooling fan relay
Load relay
Ignition switch
Rear brake light switch
Engine stop switch
Starter switch
Front brake light switch
Fuses
Oil pressure switch
Dimmer switch
Turn signal switch
Horn switch
Instruments
Fuel level sensor
Air temperature sensor
Alarm connector
Helmet box switch
Front right turn signal
Headlight
Sidelight
Sidelight
Front left turn signal
Headlight relay
Horn